

NOTES:

- 1. MANHOLE SIZE VARIES WITH THE SIZE OF THE STORM DRAINAGE PIPE
- 2. THE OUTSIDE OF THE STORM DRAINAGE PIPE SHALL BE AT LEAST 6" FROM THE INSIDE WALL OF THE INTERFERENCE MANHOLE.
- 3. THE STEEL CASING SHALL BE PLACED NO LOWER THAN THE MID-POINT OF THE STORM DRAINAGE PIPE ALLOWING WATER TO FLOW UNDER THE CARRIER PIPE.
- 4. CARRIER PIPE SHOULD BE CENTERED IN MANHOLE WITH NO JOINTS INSIDE THE INTERFERENCE MANHOLE
- 5. USE OF INTERFERENCE MANHOLE MUST BE APPROVED BY THE TOWN ENGINEER AND THE UTILITY PROVIDER.

